




Part List

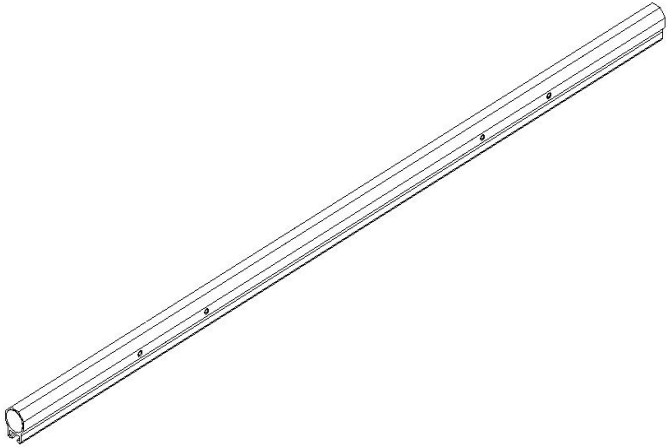


28" Crossing Bar * 1

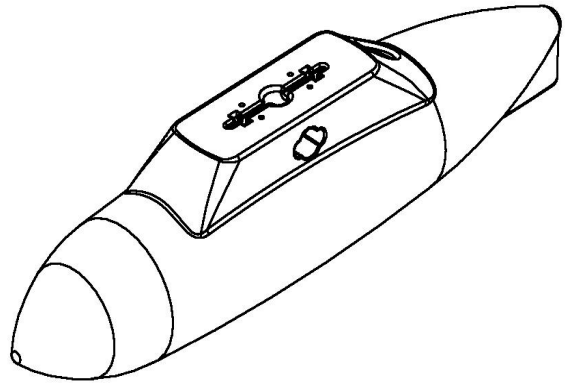



Albacore Pontoon * 2

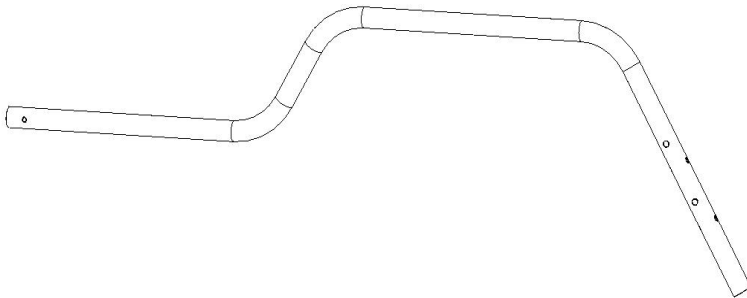

Outrigger U Arm * 2

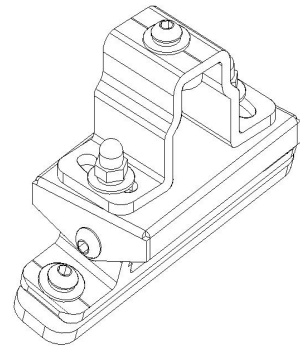


Crossing Bar Clip * 2

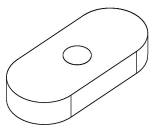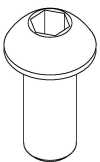

M6-14 Bolt * 4

M6 Track Nut * 4

1. Install the clip on the kayak. If your kayak is pre-assembled with tracks, the clip can mount directly on the kayak tracks. Otherwise using the backing plate included.

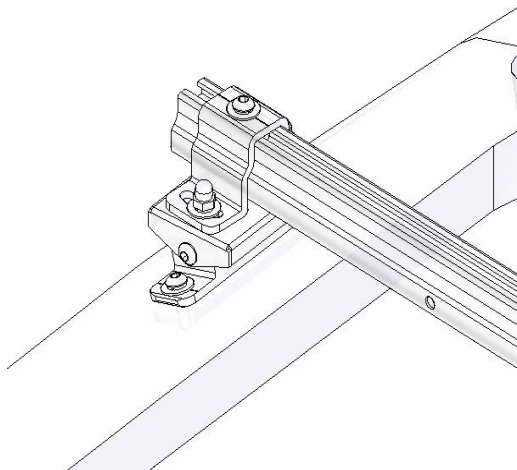

a. Mount on the kayak hull



b. Mount on the kayak tracks

2. Insert the U arm into the crossing bar. Adjust the pontoon position to fit your kayak.

